

Assembly & Installation Guide

Easy Hang Ventilated Shelving

Basic Tools For Assembly and Installation

Please read all of the instructions before beginning assembly.



Easy Hang Ventilated Shelving Components



Top Track

This is the only thing you need to screw into the wall

Hang standard

Hangs in the track.

Bracket for elfa® Ventilated Shelf

Mounted in the hang standard.

elfa® Ventilated Shelf


Snaps into the brackets.

Closet Rod Holder

Mounted in the brackets to keep the Closet Rod in place.

Closet Rod


Available in different lengths and mounted using rod holders.

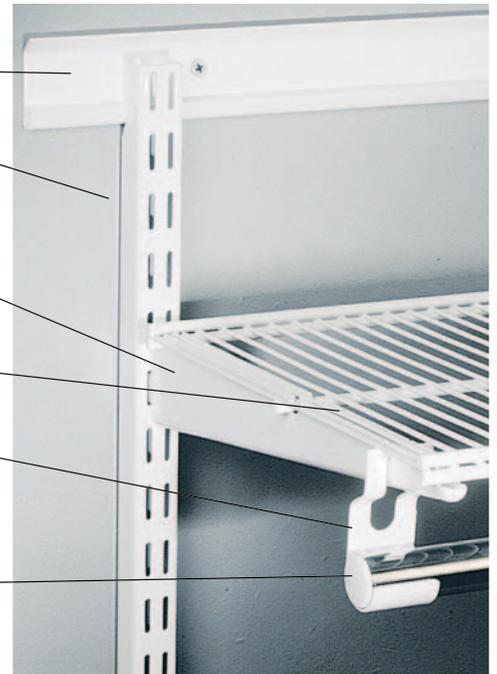

Assembly Hardware for Top Track




#2 bit

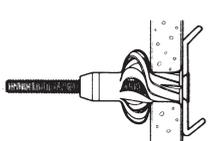

Hollow wall installation (G5)


Used for 1/2"/10 mm or 5/8"/17 mm thick drywall. Use 3/8"/10 mm drill bit to drill hole. Insert dark blue anchor, remove and discard the gray spacer. Use # 2 Phillips head bit to tighten the screw.

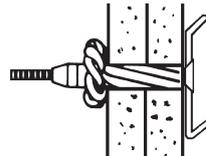

Wood installation (R6)


Used for mounting into drywall over wood studs or directly into wood. Use 1/8"/3 mm drill bit to drill a pilot hole the length of the bit. Discard anchor. Use #2 Phillips head bit to tighten the screw.

Other Installation Hardware for Special Wall Construction

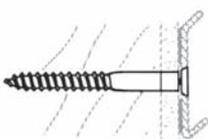

Hardware for 1"/18-30mm thick walls (G6)

Used for 1"/18-30 mm thick plaster or drywall. Use 3/8"/10 mm masonry drill bit to drill hole. Insert red anchor, remove and discard the gray spacer. Use #2 Phillips head bit to tighten the screw.

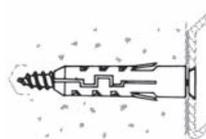

Hardware for masonry walls (R6)

Used for mounting into masonry walls, concrete, brick, etc. Use 5/16"/8 mm masonry drill bit to drill hole. Insert light blue anchor. Use #2 Phillips head bit to tighten the screw.

Easy Hang Installation - Top Track

Step 1. Position the Hang Track. It is usually placed at ceiling or door height, but may be placed at any height.

Step 2. Level the Hang Track:

- Place Hang Track at desired height, mark one hole in the middle, and take the Hang Track down.
- Begin drilling this hole with a 1/8"/3mm drill bit. If you hit wood, continue drilling the entire length of the bit. If you hit the hollow part of the wall, enlarge the hole with a 3/8"/10mm drill bit for the hollow wall anchors.
- Put the Hang Track up with one screw and tighten it enough to hold the Hang Track against the wall.
- To keep the Hang Track level while you mark all of the holes, place a level on the bottom of the Hang Track and adjust it as required.
- Take the Hang Track off of the wall.

Step 3. Drill all marked holes:

- Drill holes with a 1/8"/3 mm drill bit, assuming you are going into wood. If you hit wood, continue drilling the entire length of the bit.
- If you hit the hollow part of the wall, mark those holes with an X, reminding yourself you need to go back and drill a 3/8"/10 mm hole for the hollow wall anchors.
- To install a hollow wall anchor (dark blue), remove the screw from the anchor. Tap the dark blue anchor into the 3/8"/10 mm hole in the hollow part of the wall. Remove and discard the gray spacer.

Step 4. Install the Hang Track: Put the Hang Track up and insert and tighten all the screws.



For the wood screws, discard the light blue anchor and use a #2 Phillips head screwdriver bit and power drill to tighten the screw. Pulling the wood screw over a bar of soap before using it will make inserting the screw into the wood easier.

For the hollow wall anchors, use a #2 Phillips head screwdriver and tighten the screw. It is important to get this anchor very tight!! You will tighten this anchor until the screw stops turning. Once the Track is tight against the wall, you're finished.

Assembly Ventilated Shelving



Fig. A

Step 1
Install the Hang Track (see previous page).

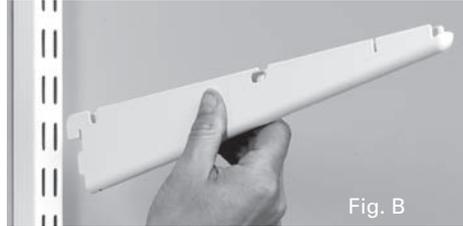


Fig. B

Step 3
Place Ventilated Shelf Brackets in the Hanging Standards at the desired Shelf height (Fig. B).



Fig. C

Snap the Closet Rod Holders into their slots in the Brackets (Fig. C).

Step 2

Hanging Standards should be placed at a maximum of 36"/900 mm apart in closets, 24"/600 mm apart for storage of heavy items (Fig. A).



Fig. D

Step 4

Place Shelf wires over notches in the Ventilated Shelf Bracket. The end of the Shelf should extend 1/2"/10 mm past the side of the Bracket. Lock the Shelf into place by pressing the middle part down and toward the wall (Fig. D). To unlock the Shelf, lift the back out of the slot and pull away from the wall. Snap the Closet Rods into their Holders (Fig. E).

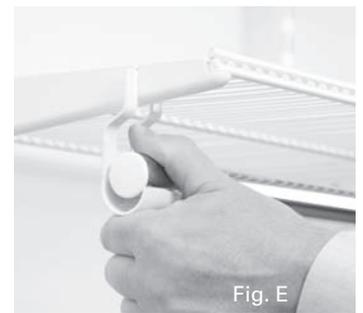


Fig. E

Elfa International AB

Elfagatan 5, SE-593 87 Västervik

Tel: +46 490 846 00. Fax: +46 490 846 25

E-mail: info@elfa.com

www.elfa.com

elfa[®]